

File Type: [3.\) Voluntary Withdrawal Notice \(Existing Shipper to GT\)](#)
 Record Code: **F303** File Type Code: **WAO**
 Version: **1.0**

Record / Field Name	Option	Field	Length	Decimal	Description	Value / Format
Transaction Type	M	T	4	0	The code of the file.	F303
Supply Point Registration Number	M	T	30	0	The reference number allocated by the Shipper	
Meter Point Reference Number	M	N	10	0	The GT's meter point reference number.	
Shipper	M	T	3	0	Shipper short code identifying the shipper, per MDD	
Date on which gas ceased to flow	C	D	8	0	Date on which gas ceased to flow	YYYYMMDD
Valid Meter Reading	C	T	12	0	The meter read. Note must show all digits and be 12 in length.	
Meter Point Status	C	T	2	0	Code for Meter Point Status	"CA" = Capped, "DE" = Dead, "LI" = Live, "OT" = Other, "PL" = Planned, "SP" = Spin Capped
Outcode	M	T	4	0	Post Code - Outcode.	
Incode	O	T	4	0	Post Code - Incode.	

File Type: [4.\) Voluntary Withdrawal Notice Response \(GT to Existing Shipper\)](#)
 Record Code: **F304** File Type Code: **WOR**
 Version: **1.0**

Record / Field Name	Option	Field	Length	Decimal	Description	Value / Format
Transaction Type	M	T	4	0	The code of the file.	F304
Supply Point Registration Number	M	T	30	0	The reference number allocated by the Shipper	
Meter Point Reference Number	M	N	10	0	The GT's meter point reference number.	
Shipper	M	T	3	0	Shipper short code identifying the shipper, per MDD	
Withdrawal Effective Date	M	D	8	0	Date on which the Supply Point Withdrawal has become effective	YYYYMMDD
Date on which gas ceased to flow	C	D	8	0	Date on which gas ceased to flow	YYYYMMDD
Valid Meter Reading	C	T	12	0	The meter read. Note must show all digits and be 12 in length.	
Meter Point Status	C	T	2	0	Code for Meter Point Status	"CA" = Capped, "DE" = Dead, "LI" = Live, "OT" = Other, "PL" = Planned, "SP" = Spin Capped
Outcode	M	T	4	0	Post Code - Outcode.	
Incode	O	T	4	0	Post Code - Incode.	
Voluntary Withdrawal Notice Response	M	T	2	0	GT's response to Voluntary Withdrawal to say if Accepted or Rejected.	"AC" =Accept / "RJ" =Reject.
Rejection Reason - Code	M/O	N	2	0	Rejection reason provided as a code number.	"01" = Shipper is not responsible for the Meter Point, "02" = Isolation has not taken place, "03" = Data mismatch
Rejection Reason - Code	M/O	N	2	0	Rejection reason provided as a code number.	"01" = Shipper is not responsible for the Meter Point, "02" = Isolation has not taken place, "03" = Data mismatch
Rejection Reason - Code	M/O	N	2	0	Rejection reason provided as a code number.	"01" = Shipper is not responsible for the Meter Point, "02" = Isolation has not taken place, "03" = Data mismatch
Rejection Reason - Text	M / O	T	256	0	Reason for the rejection provided as free text - to give additional information if required.	